




# How to Install and Remove VandlGard Tamper-Resistant Fasteners




## VANDLGARD Nut Installation

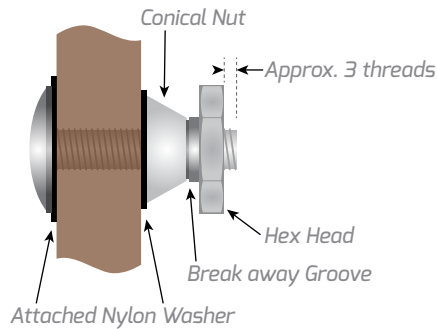


1. Thread the VandlGard nut onto the bolt and tighten until the Hex Head shears off


## VANDLGARD Nut Removal (using a second VANDLGARD Nut)

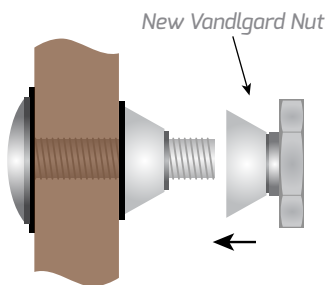

1. Install a second Vandlgard Nut (see above). Remove the remaining conical nut and reinstall it in the reverse direction

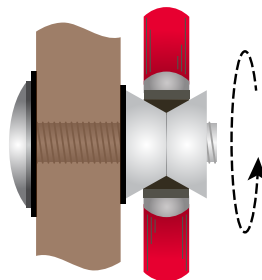


2. Using vise grips, squeeze down on both conical nuts together and twist to remove

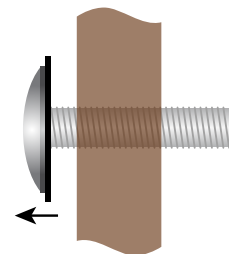


3. Original bolt remains damage-free and ready for reuse.


## VANDLGARD Nut Removal (using a Conical Removal Nut #08-1037)

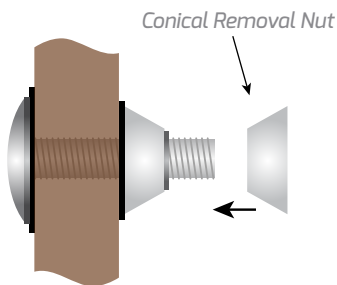

1. Install the conical removal nut in the reverse direction

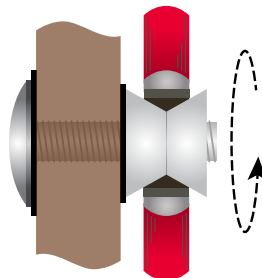

2. Using vise grips, squeeze down on both conical nuts together and twist to remove

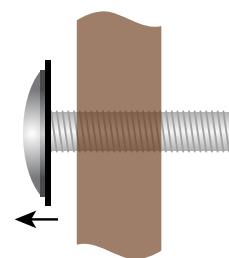

3. Original bolt remains damage-free and ready for reuse.